

# Installation Instructions for Century and Distillery Brick Panels.

**CENTURY  
ARCHITECTURE INC.**




What you will need before you get started:

- Level
- Pencil
- Power drill
- Corn whisk broom/brush
- Drop sheet
- Pre mixed mortar & Portland cement
- Utility knife
- Ceramic wall adhesive
- Mortar/paint mixer
- Pointing tool- Water
- 1/8" trowel
- Tape measure
- Damp cloth
- Protective gloves
- 5-gallon bucket
- Mortar bag

**\*\*\* Please read instructions carefully before beginning installation .\*\*\***

## Applying brick panel to wall:

1. Measure 20" from the bottom of the wall to be covered with panel. Using level, draw horizontal line at the 20" - mark to help guide the panels across the wall.

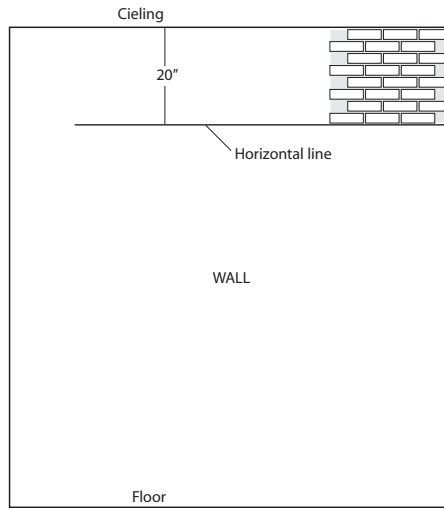

2. Dip end of trowel into adhesive, so that top quarter is covered.

3. Smooth moderate quantity of adhesive evenly over wall to be covered by panel with side-to-side or top-to-bottom motion. Spread adhesive outwards on wall, extending beyond the size of panel. Adhesive dry time may vary once applied to wall. Apply enough adhesive to cover two panels at one time.


4. Ensure that horizontal reference line is not covered with adhesive.

5. Lay panel on adhesive and press against the wall. Adjust panel so space between bricks is visually pleasing (workable dry time for adhesive is 20 minutes. Remove any excess adhesive from brick immediately with damp cloth.)

6. Individual brick pieces are available in packages of 10 per box. Single brick pieces can be helpful to complete wall sections where needed without cutting bricks out of other panels.

7. **To fill in panel where small brick pieces are needed:** overlap one loose brick piece on top of an applied piece for reference on where to score and snap loose piece.

Score the section that is needed to fill in small space on applied panel 2-3 times and snap section off.

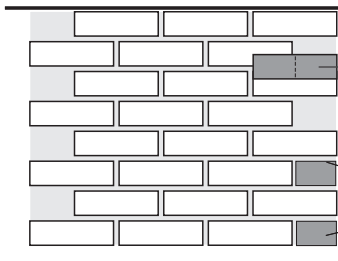

step 1. place brick piece to measure and mark length required.

step 2. score surface few times then snap pieces apart.

step 3. affix piece/pieces to fill areas needed.

8. Score excess mesh from panel with utility knife. ( Take care to ensure brick, carpeting, flooring etc. are not accidentally cut at same time.)

9. Let adhesive set for 30 minutes.

10. **Tip:** Apply corner bricks first ( if applicable ). Then work away from corner by installing full panels.